

User manual

Important Instructions Retain for future use



Read the manual before use.



Do not insert pins.



Do not use folded or rucked.



Not to be used by very young children (0-3 years old).

Product information

This heating product is equipped with a composite fiber heating element and li-ion battery (powerbank).



WARNING: Read carefully before use

- Only use the li-ion battery enclosed. Using a different battery may cause irreparable damage to the product and environment and can be dangerous.
- The appliance must not be used by persons insensitive to heat and vulnerable persons who are unable to react to overheating.
- Do not use the product for facial heating.
- Do not expose the product to excessive heat from other heat sources. The product is intended for indoor use, but can be used outdoors.
- Do not use if wet.
- Do not crease the product by placing items on top of it during storage.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.
- The appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature value.
- This appliance is not intended for medical use in hospitals.
- Do not wash the entire product, only the outer cover can be washed at 30 °C.

What's included?

- Inner cushion
- Powerbank
- Inner cover with heating element
- Charger cable
- Outer cover
- User Manual

1. Unpack the powerbank from the box in the envelope and remove the protective film on the display.
2. Carefully unpack the pillow from the protective film so that the product is not damaged.
3. Use the zippers on the pillow to find the USB cable for the heating element.
4. Remove the protective caps from the USB connectors and connect the powerbank.
5. The power bank display shows the charge level expressed in %.
6. Place the connected power bank in the pocket on the black inner cover.
7. Carefully pull back the zippers.
8. Switch on: press and hold the switch on the side of the pillow for 3 seconds until the switch gives a light signal! Heating the heating element for approx. It takes 1 minute.
9. After switching on, the switch gives a red light signal, this is the highest heat level (50 °C), after that by pressing the switch once, you can choose from additional heat levels.

The individual stages: green light signal: 40 °C, blue light signal: 45 °C, red light signal: 50 °C.

10. Power off: press and hold the switch for 3 seconds, the light signal goes out, the heating stops.



Charging

- Connect the charging cable with the USB-C side to the powerbank, then connect the other end of the charging cable to the USB-A port of your computer or to a suitable phone charging head (DC 5V-2A).
- If the display of the powerbank shows 100, the powerbank is fully charged.
- The total charging time is approximately 3 to 5 hours.

Manufacturer of powerbank

Shenzhen AiL Industrial Co., Ltd.

3F, B Building, Shizhiding Industrial Park, No.369 Pinghu street, Pinghu, Longgang, Shenzhen, PRC

Cleaning

Switch off the product and remove the outer cover. Clean the outer cover according to the washing instructions on the wash care label of the outer cushion. Do not wash the entire product, only the outer cover can be washed at 30 °C.

Storing

When not in use, store inside on a dry place. When storing the appliance, allow it to cool down before folding. Do not crease the appliance by placing items on top of it during storage.

CE CE-directive

CE - Simplified EU Declaration of Conformity

Manufacturer: Admirer Kft. - Hungary 8460, Devecser, Vasút u. 29.

This product complies with the requirements and other relevant provisions of the current European RoHS and CE directives 2014/30/EU and 2011/65/EU.

The original EU Declaration of Conformity can be downloaded from the manufacturer's website:
<https://en.gartenmobel-auflagen.de>



WEEE instruction

This product is subject to the provisions of the WEEE directive 2012/19/EU. Do not dispose the product with regular household waste. Consult your local waste disposal authorities for information on collecting points for electronic waste products.

Guarantee terms

Local and applicable legislation on guarantee will apply to your purchase. iCreate cannot accept any claims on guarantee in the event of: damage or defects caused by use; operation or treatment of the product in ways that are inconsistent with normal personal or domestic use; repairs or attempts to repair undertaken by any party other than iCreate.

NOTE: Changes or modifications which are not explicitly approved by the party responsible for compliance may void the user's authorization to use the equipment.